


# Pack Out Process for Fibre Cement Sheet

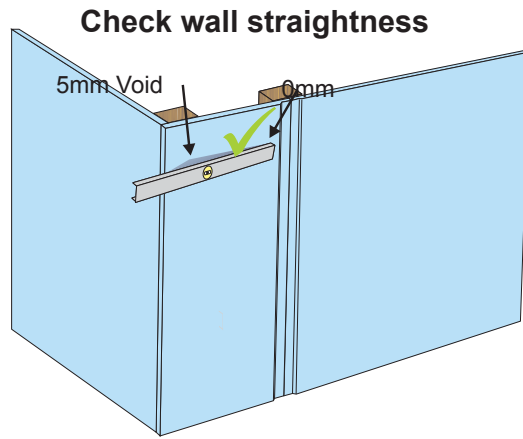

4 steps pack out process prior to application of the render system

**Set & Prep**

**A** Mix Patch Fine

**B** Whilst stirring add 10% by volume of GP Cement

**C** If required add water for ease of trowelling

Note: Mix required volume only for specific area  
Use within 30mins of mixing

15L  
Patch Fine

**D** Ensure the substrate is prepared (where required) to make 'straight and true' in preparation for decorative finish.

RSA offers a 7 Year Product Warranty provided:-

1. All substrates are installed in accordance with manufacturer specifications, Australian Standards and Good Trade Practices.
2. All products and processes as detailed above are applied by an RSA preferred contractor and in accordance with RSA Data Sheets, Application Information and Good Trade Practices. For further information visit: [www.renderystemsaustralia.com.au](http://www.renderystemsaustralia.com.au) or Tel. (07) 3287 6444  
We reserve the right to alter the above specifications at any time, without prior notice.
3. Guidelines Only – Please refer to RSA Product Data Sheets and Application Guidelines

Pack Out Process for Fibre Cement Sheet

Render Systems Australia is a Division of River Sands Pty Ltd. For further information phone 07 3287 6444 or visit [www.renderystemsaustralia.com.au](http://www.renderystemsaustralia.com.au)