


Preparation for split face block


Uneven split face block

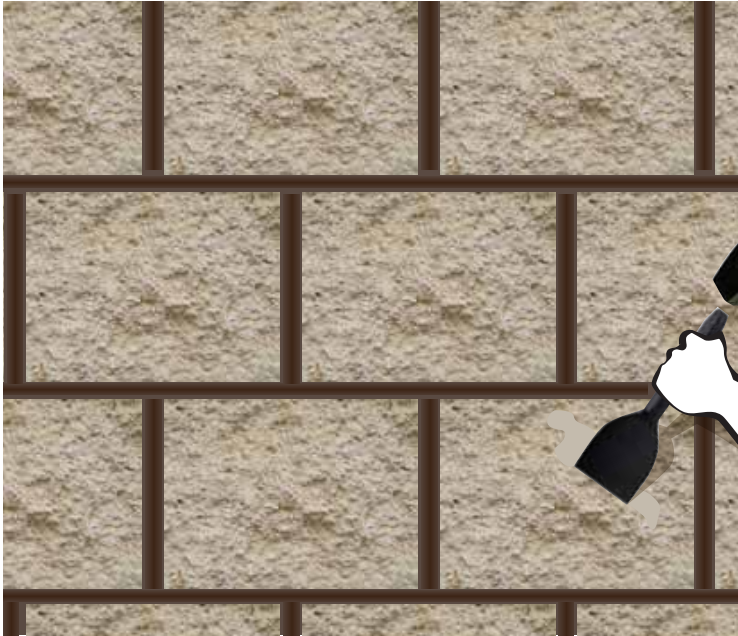

Even Up Block Face

- 1 Remove the highest peaks of the concrete block face with a hammer and bolster.

Initial Wall Straightening Process

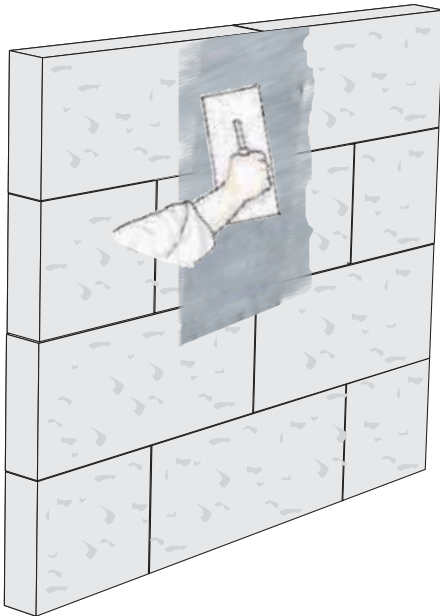

- 2 Apply base render coat to fill any voids in the block face (sand and cement up to 30mm or RSA Masonry Render in multiple coats up to 10mm in total thickness).



Up to 30mm

+



Up to 10mm

- 3 Cure for a minimum of 2 to 3 days.

- 4 Refer to levels 2 to 5 of RSA Standards for Brick and Block